



Handle/Rudder Installation Instructions



Handle/Rudder (H/R)



D = Anchor (4 of them)



E = Screw (4 of them)

Supplied Parts:

Handle/Rudder (H/R)

Anchors (4 of them)

SS Screws (4 of them)


Tools Required:

Philipshead Screwdriver

Nail or Icepick for marking holes

Installation Instructions:

1. Line up Handle/Rudder (H/R) from top flange to bottom flange.
2. Mark buoy thru hole at point B first (using nail or ice-pick).
3. Remove H/R and screw in anchor D (use a philips head screwdriver) until flange is flush with the ball surface.
4. Place H/R over anchor and screw down with 1 ss screw (E).
5. Repeat process at point C except just lift attachment to attach anchor.
6. Finalize with doing both A's at the same time

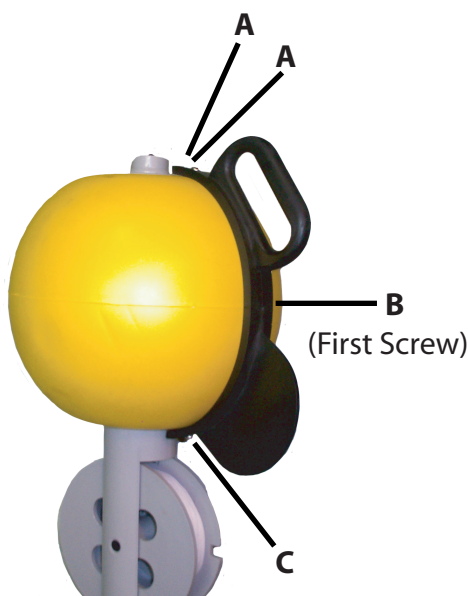

A, B & C = Attachment Holes

